

NEOPERL Product training



Faucet aerators and water conservation





Why choose NEOPERL? They did...











Pfister.





ELKAY SLOAN.










True OEM Quality



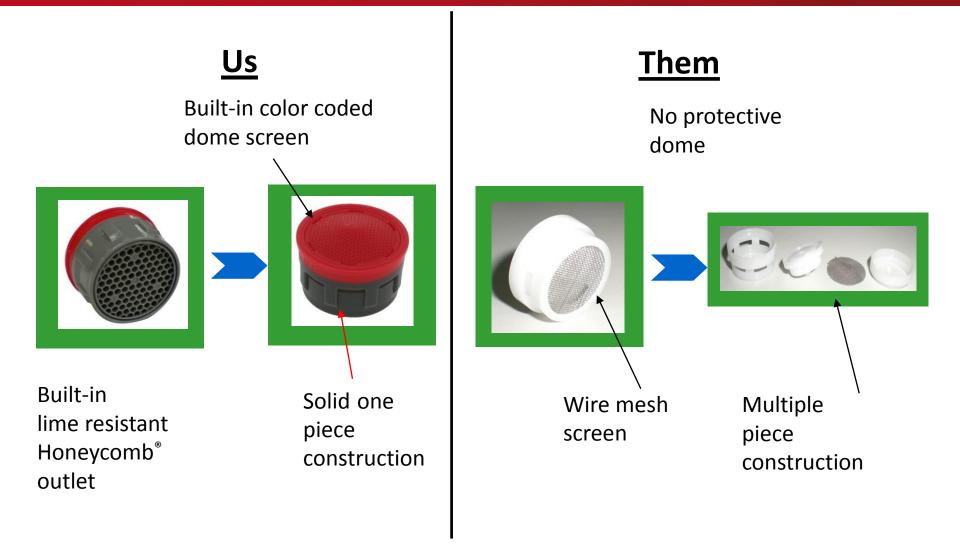



Aerator evolution



<u>Traditional Design</u> (Spring-Flo)

•Multiple Pieces •Metallic Parts





Newer Design

(OEM choice)

•Single Piece •Synthetic material



Restricted Solid color dome screen



Typical Aerator Assembly









Brass housing


Acetal insert

Rubber washer



Faucet Aerators: *selection guide*



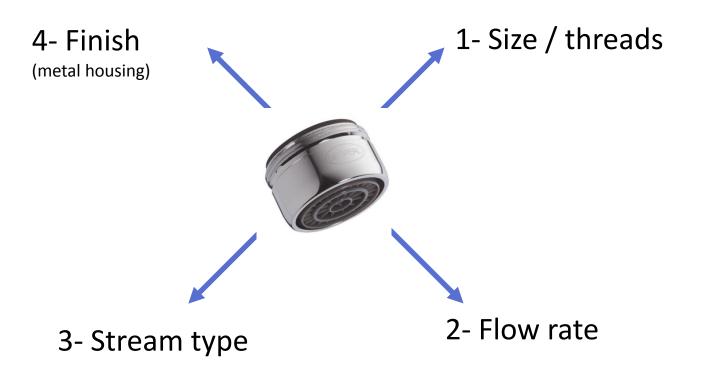



Aerator selection: Sizes




Sizes available

Regular size









Tom Thumb ("TT") size










Aerator selection: Sizes: housings



Standard aerator housings in the US residential market

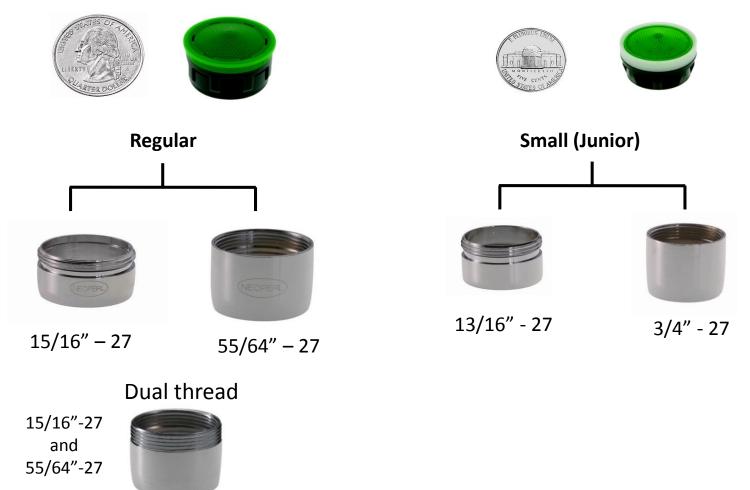



Aerator selection: Sizes: vandal proof



Vandal resistant housings for the Commercial and Institutional market






Aerator selection: VP tools



Tools to assist in Vandal Resistant product installation and removal

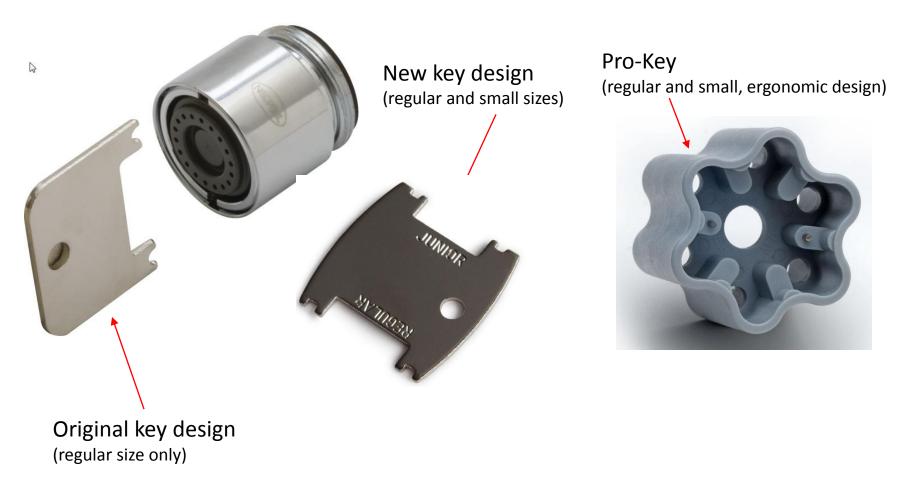



Aerator selection: Sizes: specials



The Chicago difference: Specialty thread 13/16"-24 "Chicago"

NEW!

Standard



with an adapter, uses regular size inserts



Vandal Proof



without an adapter, fits junior size inserts





Aerator selection: Flow rates



The flow rates are color coded for easier identification











Market: Residential

Healthcare


Public access



Streams and flow rates




The 3 streams are available in selected flow rates

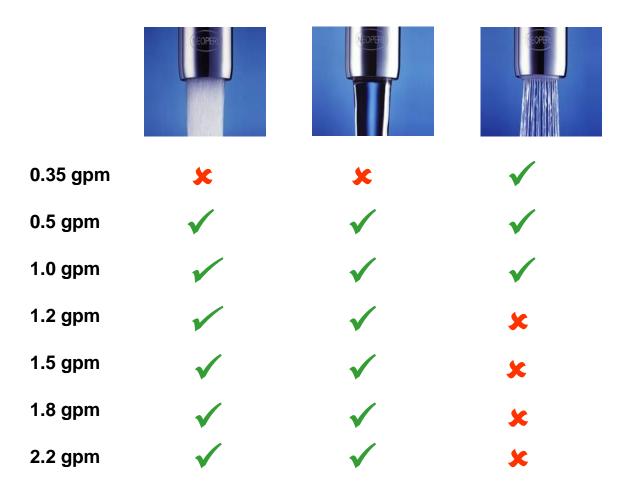




Restricted vs Pressure compensating

NEOPERL



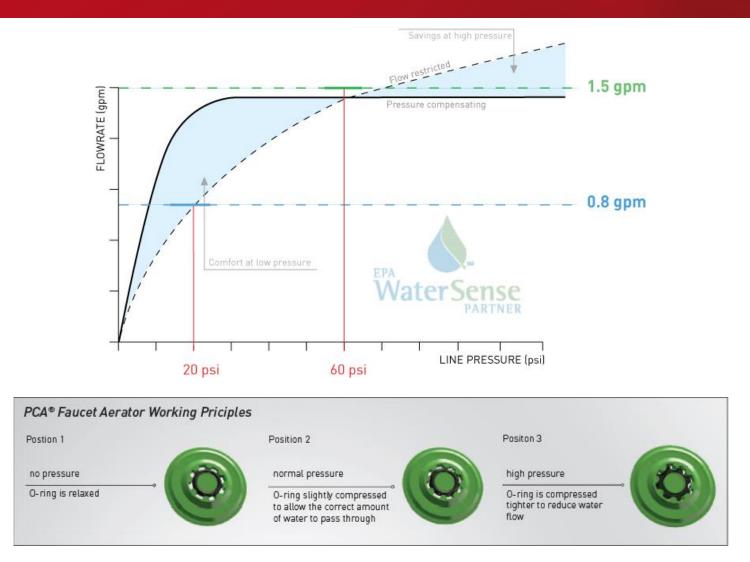




EPA

Flow rates applications



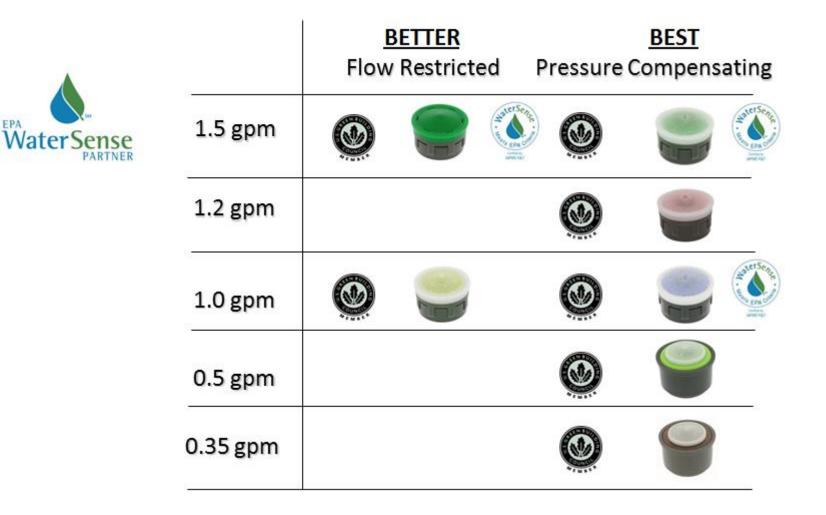



"Cache" (hidden) faucet aerators...








"Cache" Faucet Aerators: design



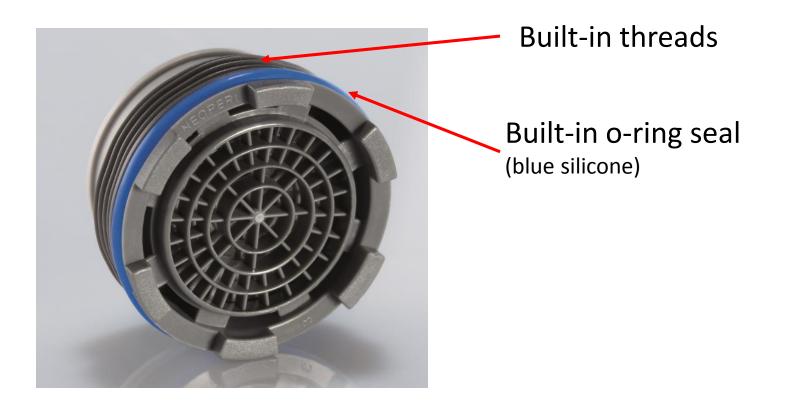



New "Cache" faucet aerators: how to install or remove





Use the key to install or remove the aerator. Align the teeth of the key with the teeth of the part to screw or unscrew.

No need to tighten hard: the seal is done by the radial blue o-ring seal













For more information and pricing for Neoperl Faucet aerators contact us at:

www.parsital.com